

E510/E520/E750 HIGH-PERFORMANCE BLENDER

EXPLORIAN™ SERIES

VM0201A & VM0201B

SYMBOLS

	Warning and Caution				
	NEVER touch moving parts. Keep hands and utensils out of the container.				
	Electric Shock Hazard				
	High temperatures exist when blending hot liquids.				
	Unplug while not in use, before cleaning the motor base or centering pad, or touching parts that move.				
	ALWAYS operate with the lid and lid plug in place.				
	Read and understand the owner's manual.				
	NEVER immerse the power cord, power plug, or motor base in water or any other liquid.				
	Parts will become hot with extended use. NEVER touch the motor base drive socket or the drive spline in the blade base.				
	On / Off				
	Start / Stop				
	Pulse				
PROGRAM SYMBOLS (CORRESPOND TO VITAMIX RECIPES)					
	Smoothies		Frozen Desserts		Hot Soup
NOTE: Only on the Explorian 750 Model					
	Dips & Spreads		Self-Cleaning		



SPECIFICATIONS

Voltage:	220 - 240 V
Frequency:	50 - 60 Hz
Power (max):	1100 - 1300 Watts
Height:	with 1.4 L / 48 oz. container on motor base OR with 2.0 L / 64 oz. container on motor base: 44.5 cm / 17.5 inches
Depth:	22.9 cm / 9.0 inches
Width:	20.3 cm / 8.0 inches





Some models are not available in all countries



vitamix.com

U.S. Patent: vitamix.com/patents

 **WARNING**

 	<p>Carefully read all instructions before operating the appliance for the first time. Save these instructions for future reference.</p> <p>ALWAYS use grounded outlets.</p> <p>NEVER remove the ground.</p> <p>NEVER use an adapter.</p> <p>NEVER use an extension cord.</p> <p>NEVER plug the appliance into a timer or an outlet controlled by a switch.</p>	 	<p>ALWAYS turn off AND unplug the appliance when not in use and before assembling, disassembling, moving, cleaning, and storing.</p> <p>NEVER immerse the power cord, power plug, or motor body in water or any other liquid.</p> <p>If the appliance becomes submerged, unplug immediately.</p> <p>Failure to follow instructions can cause death or electrical shock.</p> <p>This product is intended for HOUSEHOLD USE ONLY and is not intended to be used for commercial purposes.</p>
--	---	--	---

1. THE FAILURE TO FOLLOW ANY OF THE IMPORTANT SAFEGUARDS AND IMPORTANT INSTRUCTIONS FOR SAFE USE IS A MISUSE OF YOUR VITAMIX APPLIANCE THAT CAN VOID YOUR WARRANTY AND CREATE THE RISK OF SERIOUS INJURY.
2. The instructions appearing in this manual cannot cover every possible condition and situation that may occur. Common sense and caution must be practiced when operating and maintaining any appliance.
3. Strictly follow the care and cleaning instructions provided in this manual.
4. NEVER use the appliance for anything other than its intended use.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance. Keep the cord out of reach from children.
7. Remove and discard packaging materials, the power plug cover, and promotional labels before using the appliance for the first time.
8. NEVER unplug the appliance by pulling on the cord. To unplug the appliance, grasp the power plug and pull from the outlet.
9. NEVER come in contact with moving parts, especially the blades.
10. NEVER operate the appliance with loose, nicked, or damaged blending blades. Check the blending blades prior to each use and replace if damaged.
11. NEVER tighten the acorn nut (on the top of the blade assembly). If loose, replace the blade assembly immediately.
12. NEVER place the appliance on or near a hot gas or electric burner, or where it could touch any other source of heat.
13. If the appliance will not operate, unplug the appliance and reset the household electrical system circuit protector. If the circuit protector continues to trip, unplug the appliance from the outlet and contact a qualified electrician.
14. NEVER allow the power cord to hang over the edge of a table or counter, touch hot surfaces, or become knotted.
15. ALWAYS ensure the appliance is completely and properly assembled before operation including the unwinding of the power cord fully before use.
16. The blending blade assembly is very sharp. Handle carefully and keep out of reach of children.
17. NEVER use attachments other than those provided with the appliance or offered separately from Vitamix. The use of attachments, including preserving jars, not sold or recommended by Vitamix may cause fire, electric shock, or injury and will void the warranty.
18. Alteration or modification of any part of the appliance, including the use of any part or parts that are not genuine authorized Vitamix parts, may cause fire, electric shock, or injury and will void your warranty.
19. ALWAYS ensure the appliance is unplugged from the power outlet before cleaning the motor base or centering pad, or touching parts that move.
20. NEVER fill the container above the marked "MAXIMUM CAPACITY" line to avoid risk of injury caused by damage to the lid and container.
21. When blending hot liquids or ingredients in the container, use caution; spray or escaping steam may cause burns. NEVER fill the container above the marked "MAXIMUM CAPACITY" line.
22. ALWAYS begin processing on the lowest speed setting, Variable Speed 1. Keep hands and other exposed skin away from the lid opening to prevent possible burns.
23. Extreme caution must be used when moving an appliance or container filled with hot oil or other hot liquids; spray or escaping steam may cause burns.

IMPORTANT SAFEGUARDS

24. NEVER touch surfaces that may be hot.
25. NEVER remove ingredients from the appliance during operation. Ensure the motor has completely stopped and the container removed from the motor base before removing any ingredients.
26. If food becomes lodged around the blending blade, remove the container from the motor base, and use a spatula to dislodge the food. NEVER use fingers as the blending blade is sharp.
27. Keep hands, hair, clothing, and utensils away from all moving parts during operation to reduce the risk of severe injury to persons and/or damage to the appliance. A spatula may be used, but only when the container has been removed from the motor base.
28. If the blend is not processing when blending dry, thick, or heavy mixtures, stop operation and use a spatula to dislodge the food. NEVER use fingers as the blending blade is sharp. Allow the motor to cool for 1 minute before turning the appliance back on.
29. NEVER allow the blending blade to soak in water.
30. NEVER use outdoors or on moving vehicles or boats.
31. NEVER leave the working area when the appliance is in use.
32. NEVER leave any foreign object, such as spoons, forks, knives, or the lid plug in the container as this will damage the blades and other components when starting the appliance and may cause injury.
33. If during use, the sound of the appliance changes or if a hard or foreign object comes into contact with the blades, NEVER serve the food being made with the appliance.
34. NEVER expose the container to temperatures or ingredients over 210°F (99°C).
35. ALWAYS operate the appliance with the lid and lid plug firmly in place when the machine is in operation. NEVER remove the 2-part lid while the blades are rotating. Only remove the lid plug to add ingredients and to use the tamper.
36. NEVER remove the lid while blades are rotating. Only remove the lid plug to add ingredients and to use the tamper. If the lid is removed during operation, the motor base will stop and will not run until the lid and lid plug are in place on the container.
37. NEVER operate the appliance without the centering pad installed properly underneath the container.
38. Ensure the container is flush with the centering pad to ensure the drive spline is engaged with the drive socket before operating.
39. NEVER place a blade assembly on the motor base unless assembled to the Vitamix container to reduce the risk of injury.
40. NEVER attempt to place a container on an operating motor base or operate a motor base without a container properly in place.
41. When making nut butters or oil-based foods, do not process for more than one minute after the mixture starts to circulate in the container. Processing for longer periods can cause overheating.
42. The appliance will reset itself in the event of power line surge. This is a design feature to avoid hazards, if used as intended. The timer is only for the user's reference and is not considered an essential function of the appliance's operation.
43. Regularly inspect the power cord, power plug, and the appliance for any damage. NEVER operate if damaged in any way or after the appliance malfunctions. Immediately cease use of the appliance and visit www.vitamix.com or call Vitamix Household Technical Support at 1.800.484.2649 or 1.440.235.4840 or email service@vitamix.com at once for examination, repair, replacement, or adjustment. If purchased outside the U.S.A. or Canada, contact your local Vitamix dealer.
44. Any repair, servicing, or replacement of parts must be performed by Vitamix or a Vitamix authorized service representative.
45. **SAVE THESE INSTRUCTIONS.**

Container, Lid, Lid Plug, and Tamper

NOTE: Legacy containers can be used on the Explorian Series motor base.

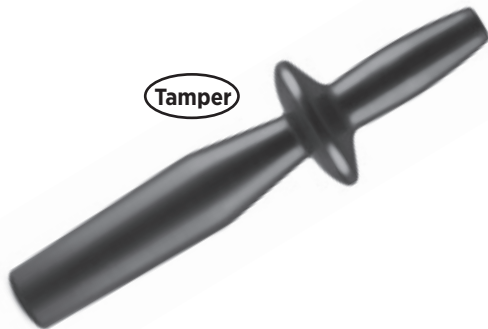
- Programs, if included, are optimized specifically for the container that was part of the original purchase.
- ALWAYS leave the lid on when operating the appliance and remove ONLY the lid plug to use the tamper or to add ingredients.
- NEVER use the tamper for more than 30 consecutive seconds to avoid overheating.
- NEVER operate the appliance without ensuring the lid is securely locked in place.
- The lid plug is marked so it can be used as a measuring cup.
- Insert the lid plug through the lid plug opening. Lock the plug in place by rotating it clockwise. To remove, turn the plug counter-clockwise and lift it out.
- Lids and tampers are NOT interchangeable between different container styles, types, and sizes. **Use only the tamper and lid supplied with your appliance. If you do not have the correct tamper for your container, contact Vitamix Household Technical Support at 1.800.848.2649 (International: 1.440.235.4840).**
- The container should not be more than 2/3 full when the tamper is used.
- ALWAYS load the container according to the Vitamix recipe directions or the Ingredient Load Order illustration on page 6.

Motor Base

- The motor is designed to protect itself from overheating.
- If the appliance will not start immediately, check to ensure the appliance is plugged in and the On/Off Switch is ON.
- If the motor has overheated, allow the motor to cool for 20-45 minutes.



Explorian 750 shown with 2.0 L / 64 oz. container. The container, tamper, and lid may be different depending on your model.



TAMPERS



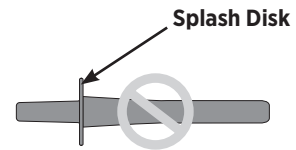
CAUTION

Rotating Blades Can Cause Damage. Lids and tampers are NOT interchangeable between different container styles, types, and sizes. Use the tamper that was supplied with your appliance.

How to Determine the Tamper to be Used with Your Container

Before using a tamper during blending, verify you have the correct tamper. Only use the tamper with the lid securely locked in place and the lid plug removed. **If a tamper came with your appliance at purchase, it is the correct tamper to use.** If a tamper did not come with your appliance or you want to determine if a tamper you already have can be used with your new container, use these steps and illustrations to determine what tamper to use:

1. Place the lid on an empty container.
2. Remove the lid plug and insert the tamper through the lid plug opening. The tamper should fit easily into the opening. It should NOT come into contact with the blades no matter where you move the tamper inside the container.
3. Visually inspect: **IF THE TAMPER TOUCHES THE BLADES AT ANY ANGLE, NEVER USE THE TAMPER WITH YOUR CONTAINER.**
4. If you do not have the correct tamper for your container, contact Vitamix Household Customer Service at 1.800.848.2649 or 1.440.235.4840.



A non-step tamper MUST NOT be used with any Vitamix container.

HOW TO USE THE TAMPER:

IMPORTANT! The splash disk (near the top of the tamper) and lid prevent the tamper from hitting the blades when the lid is secured properly in the locked position.

- The container should not be more than two-thirds full when the tamper is used during blending.
- To avoid overheating during blending, DO NOT use the tamper for more than 30 consecutive seconds.
- If the food does not circulate, there may be a trapped air bubble. Carefully remove the lid plug, while making sure the lid stays firmly in place. Release the air bubble by inserting the tamper through the lid plug opening.
- Holding the tamper straight down may not help the ingredients circulate. If necessary, point the tamper towards the sides or corners of the container. DO NOT try to force the tamper deeper into the container.

CONTAINER TYPES

1.4 L / 48-OUNCE

Uses a 9-3/4" tamper.



LOW-PROFILE 2.0 L / 64-OUNCE

Has a black lid and uses an 11" tamper.



CLASSIC 2.0 L / 64-OUNCE

Uses a 12-1/2" long tamper.




0.9 L / 32-OUNCE


Uses a 9-3/4" tamper.




CONTROL PANEL


On/Off Switch  - Controls power to the machine and is located on the front of the motor base.


Control Panel - Contains the Pulse, Variable Speed Dial, Start/Stop Switch, and Self-Cleaning (Explorian 750 model only) features.

Pulse  - Rotates the blade at the speed on the Variable Speed Dial when pressed and is located on the left side of the control panel.


Variable Speed Dial - Provides manual speed control from Variable 1 (slowest) to 10 (highest).

Standby  - Pauses the appliance and has it ready to start the next recipe.


Program - Operates the appliance for preset times and will stop automatically at the end of the program. When the Start/Stop Switch  is pressed in the middle of a program, the machine will stop and the program time will reset.


If the dial is turned to Standby  in the middle of a program, it will not go back to the middle of a program it was running. The next desired program will need to be selected.


The Program icons are displayed in Vitamix recipes.



Explorian 750 Only:  Dips & Spreads

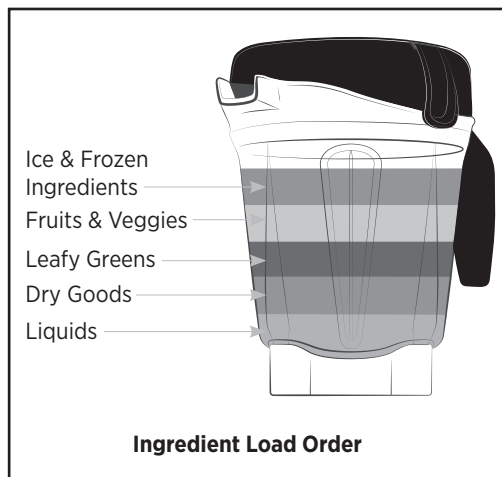
Self-Cleaning  - (Only on Explorian 750)
Runs the cleaning cycle after water and dishwashing liquid have been added to the machine and the lid and lid plug are in place.

Start/Stop Switch  - Stops or Starts the blending at any time and is located on the right side of the control panel.

When the Start/Stop Switch  is pressed in the middle of a program, the machine will stop and the program time will reset to the beginning of the run time.



EXPLORIAN 750



! WARNING



To Avoid Injury. NEVER TOUCH MOVING PARTS.



Keep hands and utensils out of the container during appliance operation. NEVER insert fingers or utensils around the blades while the blades are spinning.

The blades will continue to spin until they come to a complete stop at the end of the blend cycle.



NEVER fill the container above the marked "MAXIMUM CAPACITY" line to avoid risk of injury caused by damage to the lid and container.



NEVER attempt to place a container on an operating motor base or operate a motor base without a container properly in place.

To avoid possible burns, NEVER start on speeds above Variable Speed 1 when processing hot liquids in a large container. Escaping steam, splashes, or contents may burn. ALWAYS

operate with the lid and lid plug in place and start on Variable Speed 1, then slowly increase to 10.

Parts will become hot with extended use. NEVER touch the motor base drive socket or the drive spline in the blade base.

TIPS TO PREVENT OVERHEATING

- Process only Vitamix recipes when learning to use the appliance.
- NEVER process recipes for longer than recommended. Over-processed blends can also result in the incorrect recipe texture.
- NEVER process recipes at lower or higher speeds than recommended.
- Use the tamper to process thicker mixtures and keep ingredients moving around and through the blades.

BLENDING IN THE CONTAINER

1. ALWAYS ensure the Variable Speed Dial is in Standby (⊖) position.
2. Press the On/Off Switch (see page 6 for location) to the ON (I) position.
3. Load the container according to the Vitamix recipe directions or the Ingredient Load Order illustration (see page 6).

IMPORTANT! ALWAYS operate the appliance with the lid and lid plug firmly in place when the machine is in operation. NEVER remove the lid while blades are rotating. Only remove the lid plug to add ingredients and to use the tamper. If the lid is removed during operation, the motor base will stop and will not run until the lid and lid plug are in place on the container.

4. Place the lid onto the container:
 - Push down on the lid until the two tabs snap onto the lip of the container.
 - Insert the lid plug and turn clockwise to lock it into the lid.
5. Place the container onto the motor base. (The appliance will not operate without a container with the lid attached.)
6. **TO USE VARIABLE SPEED:**
 - a. Turn the Variable Speed Dial clockwise to Variable Speed 1.
 - b. Press the Start/Stop Switch.
 - c. Rotate the Dial between Variable Speed 1 and 10 during the blending cycle to increase or decrease the speed of the blades.
 - d. At the end of the blend, rotate the Variable Speed Dial counter-clockwise to Standby (⊖) or press the Start/Stop Switch ▷|◻ to stop the appliance.

TO USE PROGRAMS:

- a. Turn the Variable Speed Dial counter-clockwise to the desired program.
- b. Press the Start/Stop Switch to start the program. The appliance will stop automatically at the end of the program or press the Start/Stop Switch at any time to stop the program.
7. If the mixture stops circulating:
 - a. Remove the lid plug, insert the tamper through the lid plug opening, and stir until the mixture 'burps'.
 - b. If this does not work, press the On/Off Switch to stop the motor.
 - c. Remove the container from the motor base, remove the lid, and use a rubber spatula to press the air bubble away from the blades.
 - d. Add liquid if necessary.
 - e. Replace the lid and lid plug.
 - f. Return the container to the motor base and continue blending.
8. After blending, wait until the blades stop completely before removing the lid or removing the container from the motor base.
9. Use a Vitamix Under Blade Scraper or spatula to remove salsa, jelly, jam, peanut butter, and other ingredients from the container.

WARNING



To Avoid Injury and Damage

To avoid inadvertent activation, turn off and unplug the appliance before cleaning.

NEVER tighten the acorn nut (on the top of the blade assembly). If loose, replace the blade assembly immediately.



Electrical Shock Hazard

ALWAYS unplug the motor base before cleaning or when not in use.

NEVER put the motor base in water or other liquid.

Failure to follow instructions can cause death or electrical shock.



BEFORE FIRST USE

The container is designed to be completely cleanable without removing the retainer nut and blade assembly. The cleaning and sanitizing procedures or a dishwasher cleaning cycle will ensure a complete and thorough cleaning of the container and components.

- NEVER attempt to remove the retainer nut or blade assembly from the container.
 - If the container is damaged, DO NOT USE IT. Contact Vitamix Household Technical Support IMMEDIATELY for assistance.
1. Wipe the motor base with a warm damp cloth and wipe clean with a dry, soft cloth.
 2. Wash the container, lid, lid plug, and tamper with warm, soapy water. Rinse all parts and wipe dry with a dry, soft cloth.
 3. Place the appliance on the counter that is level, dry and clean.
 4. Plug the appliance into a grounded, 3-prong outlet.

MOTOR BASE CLEANING

1. Turn off and unplug the appliance and remove the container from the motor base.
2. Wash the outside surface with a damp, soft cloth or sponge rinsed in a mild solution of liquid dish soap and warm water.
NOTE: NEVER immerse the power cord, power plug, or motor body in water or any other liquid.
3. The centering pad can be removed for more thorough cleaning and is dishwasher safe or can be hand-washed in warm, soapy water.
4. Immediately dry all surfaces and polish with a soft cloth.

TAMPER CLEANING

The tamper is dishwasher safe or can be hand-washed in warm, soapy water. Rinse clean under running water and then dry.

CONTAINER CLEANING - DISHWASHER

The container, lid, blade base, and seal are dishwasher safe or can be hand-washed and sanitized using the following procedures.

CONTAINER CLEANING - SELF-CLEANING (EXPLORIAN 750 ONLY)



1. Fill the container half full with warm water and add a couple of drops of dishwashing liquid.
2. Snap or push the complete 2-part lid into the locked position.
3. Rotate the Variable Speed Dial to the Self-Cleaning icon.
4. The program will stop automatically when complete.
5. Rinse and drain all pieces.

CONTAINER CLEANING - VARIABLE SPEED

1. Fill the container half full with warm water and add a couple of drops of dishwashing liquid.
2. Snap or push the complete 2-part lid into the locked position.
3. Press the Start/Stop Switch to turn on the appliance and slowly increase to Variable Speed 10.
4. Run the appliance for 30 to 60 seconds.
5. Rotate the Variable Speed Dial back to Variable Speed 1 and press the Start/Stop Switch to turn off the appliance.
6. Rinse and drain all pieces.

CONTAINER SANITIZING - BLEACH

1. First perform the "Container Cleaning" instructions.
2. Then repeat the "Container Cleaning" instructions but add 7.4 ml (1.5 teaspoons) of liquid bleach to 473 ml (16 oz.) of water.
3. Allow the mixture to stand in the container for an additional 1-1/2 minutes.
4. Pour the bleach mixture out. Allow container to air dry. DO NOT rinse after sanitizing. If desired, rinse immediately before next use.

CONTAINER SANITIZING - VINEGAR

1. First perform the "Container Cleaning" instructions.
2. Then repeat the "Container Cleaning" instructions but use 473 ml (16 oz.) of vinegar for every 473 ml (16 oz.) of water.
3. Allow the mixture to stand in the container for an additional 3 full minutes. Total contact time of the vinegar solution in the container should equal 5 minutes.
4. Pour the vinegar solution out of the container over the inside surface of the 2-part lid.
5. Repeat the sanitizing procedure a second time (Steps 2 through 4).
6. Allow the container and lid to air dry. DO NOT rinse after sanitizing. If desired, rinse immediately before next use.

WARRANTY AND SERVICE FOR EXPLORIAN 510

5-Year Full Machine Warranty

IMPORTANT RESTRICTION: VITAMIX MAY RESTRICT WARRANTY SERVICE FOR OUR PRODUCTS TO THE COUNTRY WHERE VITAMIX OR ITS AUTHORISED DISTRIBUTORS ORIGINALLY SOLD THE PRODUCT.

- Vitamix does not recommend use of our products outside of the country where such products were sold and built to be used.
- Our products are approved and certified to country-specific safety standards.
- Each country may require a different voltage and frequency, power cable, and plug for the same product.
- After-sales service may not be available outside of the country where Vitamix or any of its authorised distributors originally sold a product, as our authorised distributors and repair technicians stock repair parts that may be country-specific.

1. Product Warranty.

To verify warranty, contact the Authorised Vitamix Household Distributor/Service Provider in your country by visiting https://www.vitamix.com/vr/en_us/international-support.

2. Who Can Seek Warranty Coverage.

This Warranty is extended by Vitamix to the owner of this appliance for personal household use only. This Warranty does not apply to products used for commercial, rental, or re-sale purposes. Should the ownership of the Vitamix change during the warranty period, please provide the new owner with a copy of the original receipt to be able to verify start-date of the warranty.

3. What is Covered.

Vitamix warrants to the owner that if this appliance (an “appliance” consists of a motor base, any container(s), lids, and tamper(s) purchased together) fails within 5 years from the earlier of the date of purchase or date of delivery as permitted by law due to a defect in material or workmanship or as a result of normal wear and tear from ordinary household use. The Authorised Vitamix Household Distributor/Service Provider will, within 30 days of receipt of the returned appliance, repair the failed appliance or component part of the appliance free of charge.

If, in Vitamix’s sole discretion, the failed appliance or component part of the appliance cannot be repaired, the Authorised Vitamix Household Distributor/Service Provider will elect to replace the appliance free of charge with the same model or the next closest model if original model is no longer available to purchase. In this case, the warranty start-date remains the same as the purchase date of the original Vitamix.

4. What is Not Covered.

- This Warranty does not apply to appliances used commercially or in non-household applications.
- This Warranty is only valid if the appliance is used and maintained in accordance with the instructions, warnings, and safeguards contained in the owner’s manual. This Warranty does not cover damage caused by accidents (ex: foreign object in container while blending, dropping of unit or container, etc.).
- This Warranty does not cover damage resulting from use of the appliance outside of the country where it was sold and built to be used, and Warranty service may be restricted to the country where Vitamix or its authorized distributors originally sold the appliance.
- This Warranty does not cover cosmetic changes that do not affect performance, such as discoloration, scratches, or the effects of the use of abrasives or cleaners or food build up.

Containers: Processing certain herbs and spices in the container/cup will result in cosmetic marring of the container/cup and may cause the blades to wear prematurely. Traces of sand, coarse gritty and abrasive herbs will also cause the blades to wear prematurely. Herbs may contain volatile oils, cause the container/cup to retain the oils and cause permanent discoloration. Your container/cup and blades are not covered under the Vitamix warranty under these circumstances.

Vitamix will not be responsible for the cost of any unauthorised warranty repairs. Your Vitamix may only be serviced or repaired by an Authorized Vitamix Household Distributor/Service Provider.

REPAIR, REPLACEMENT OR REFUND OF THE PURCHASE PRICE ARE THE EXCLUSIVE REMEDIES OF PURCHASER AND THE SOLE LIABILITY OF VITAMIX AND ITS AUTHORISED DISTRIBUTORS UNDER THIS WARRANTY. NO EMPLOYEE OR REPRESENTATIVE OF VITAMIX OR ANY OF ITS AUTHORISED DISTRIBUTORS IS AUTHORISED TO MAKE ANY ADDITIONAL WARRANTY OR ANY MODIFICATION TO THIS WARRANTY WHICH MAY BE BINDING UPON VITAMIX. ACCORDINGLY, PURCHASER SHOULD NOT RELY UPON ANY ADDITIONAL STATEMENTS MADE BY ANY EMPLOYEE OR REPRESENTATIVE OF VITAMIX OR ANY OF ITS AUTHORISED DISTRIBUTORS. IN NO EVENT, WHETHER BASED ON CONTRACT, INDEMNITY, WARRANTY, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE, SHALL VITAMIX BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF PROFIT OR REVENUE.

NOTE: If your Vitamix needs to be serviced but does not fall within the Warranty guidelines, it may still be repaired at your cost (for repair and shipping). Contact the Authorised Vitamix Household Distributor/Service Provider in your country by visiting https://www.vitamix.com/vr/en_us/international-support. For Vitamix Household Support or Sales call 800.848.2649 or +1.440.235.4840 (International) or email service@vitamix.com.

5. What Voids this Warranty.

- Abuse, misuse, negligent use, alteration of the appliance, exposure to abnormal or extreme conditions, or failure to follow the operating instructions in this manual will void this Warranty.
- The Warranty is also void if repairs to the appliance or any component part of the appliance are performed by someone other than either Vitamix or an authorised Vitamix Service Provider or if any component part of a appliance subject to this Warranty is used in combination with a motor base or container that is not expressly authorised by Vitamix.
- The warranty is void when the appliance is used with a transformer or adapter to convert the voltage.

6. How to Obtain Warranty Service.

Contact the Authorised Vitamix Household Distributor/Service Provider in your country for assistance servicing your Vitamix. For a list of Vitamix Distributors, visit https://www.vitamix.com/vr/en_us/international-support.

WARRANTY AND SERVICE FOR EXPLORIAN 520 & 750

7-Year Full Machine Warranty

IMPORTANT RESTRICTION: VITAMIX MAY RESTRICT WARRANTY SERVICE FOR OUR PRODUCTS TO THE COUNTRY WHERE VITAMIX OR ITS AUTHORISED DISTRIBUTORS ORIGINALLY SOLD THE PRODUCT.

- Vitamix does not recommend use of our products outside of the country where such products were sold and built to be used.
- Our products are approved and certified to country-specific safety standards.
- Each country may require a different voltage and frequency, power cable, and plug for the same product.
- After-sales service may not be available outside of the country where Vitamix or any of its authorised distributors originally sold a product, as our authorised distributors and repair technicians stock repair parts that may be country-specific.

1. Product Warranty.

To verify warranty, contact the Authorised Vitamix Household Distributor/Service Provider in your country by visiting https://www.vitamix.com/vr/en_us/international-support.

2. Who Can Seek Warranty Coverage.

This Warranty is extended by Vitamix to the owner of this appliance for personal household use only. This Warranty does not apply to products used for commercial, rental, or re-sale purposes. Should the ownership of the Vitamix change during the warranty period, please provide the new owner with a copy of the original receipt to be able to verify start-date of the warranty.

3. What is Covered.

Vitamix warrants to the owner that if this appliance (an “appliance” consists of a motor base, any container(s), lids, and tamper(s) purchased together) fails within 7 years from the earlier of the date of purchase or date of delivery as permitted by law due to a defect in material or workmanship or as a result of normal wear and tear from ordinary household use. The Authorised Vitamix Household Distributor/Service Provider will, within 30 days of receipt of the returned appliance, repair the failed appliance or component part of the appliance free of charge.

If, in Vitamix’s sole discretion, the failed appliance or component part of the appliance cannot be repaired, the Authorised Vitamix Household Distributor/Service Provider will elect to replace the appliance free of charge with the same model or the next closest model if original model is no longer available to purchase. In this case, the warranty start-date remains the same as the purchase date of the original Vitamix.

4. What is Not Covered.

- This Warranty does not apply to appliances used commercially or in non-household applications.
- This Warranty is only valid if the appliance is used and maintained in accordance with the instructions, warnings, and safeguards contained in the owner’s manual. This Warranty does not cover damage caused by accidents (ex: foreign object in container while blending, dropping of unit or container, etc.).
- This Warranty does not cover damage resulting from use of the appliance outside of the country where it was sold and built to be used, and Warranty service may be restricted to the country where Vitamix or its authorized distributors originally sold the appliance.
- This Warranty does not cover cosmetic changes that do not affect performance, such as discoloration, scratches, or the effects of the use of abrasives or cleaners or food build up.

Containers: Processing certain herbs and spices in the container/cup will result in cosmetic marring of the container/cup and may cause the blades to wear prematurely. Traces of sand, coarse gritty and abrasive herbs will also cause the blades to wear prematurely. Herbs may contain volatile oils, cause the container/cup to retain the oils and cause permanent discoloration. Your container/cup and blades are not covered under the Vitamix warranty under these circumstances.

Vitamix will not be responsible for the cost of any unauthorised warranty repairs. Your Vitamix may only be serviced or repaired by an Authorized Vitamix Household Distributor/Service Provider.

REPAIR, REPLACEMENT OR REFUND OF THE PURCHASE PRICE ARE THE EXCLUSIVE REMEDIES OF PURCHASER AND THE SOLE LIABILITY OF VITAMIX AND ITS AUTHORISED DISTRIBUTORS UNDER THIS WARRANTY. NO EMPLOYEE OR REPRESENTATIVE OF VITAMIX OR ANY OF ITS AUTHORISED DISTRIBUTORS IS AUTHORISED TO MAKE ANY ADDITIONAL WARRANTY OR ANY MODIFICATION TO THIS WARRANTY WHICH MAY BE BINDING UPON VITAMIX. ACCORDINGLY, PURCHASER SHOULD NOT RELY UPON ANY ADDITIONAL STATEMENTS MADE BY ANY EMPLOYEE OR REPRESENTATIVE OF VITAMIX OR ANY OF ITS AUTHORISED DISTRIBUTORS. IN NO EVENT, WHETHER BASED ON CONTRACT, INDEMNITY, WARRANTY, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE, SHALL VITAMIX BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF PROFIT OR REVENUE.

NOTE: If your Vitamix needs to be serviced but does not fall within the Warranty guidelines, it may still be repaired at your cost (for repair and shipping). Contact the Authorised Vitamix Household Distributor/Service Provider in your country by visiting

https://www.vitamix.com/vr/en_us/international-support. For Vitamix Household Support or Sales call 800.848.2649 or +1.440.235.4840 (International) or email service@vitamix.com.

5. What Voids this Warranty.

- Abuse, misuse, negligent use, alteration of the appliance, exposure to abnormal or extreme conditions, or failure to follow the operating instructions in this manual will void this Warranty.
- The Warranty is also void if repairs to the appliance or any component part of the appliance are performed by someone other than either Vitamix or an authorised Vitamix Service Provider or if any component part of a appliance subject to this Warranty is used in combination with a motor base or container that is not expressly authorised by Vitamix.
- The warranty is void when the appliance is used with a transformer or adapter to convert the voltage.

6. How to Obtain Warranty Service.

Contact the Authorized Vitamix Household Distributor/Service Provider in your country for assistance servicing your Vitamix. For a list of Vitamix Distributors, visit https://www.vitamix.com/vr/en_us/international-support.

E510/E520/E750 HØYYTELSESBLENDER

EXPLORIAN™-SERIEN

VM0201A OG VM0201B

SYMBOLER

	Advarsel og forsiktighetsregel
	Berør ALDRI bevegelige deler. Hold hendene og redskaper ute av beholderen.
	Fare for elektrisk støt
	Høye temperaturer oppstår når varme væsker blandes.
	Kobles fra når det ikke brukes, før motorbasen eller sentreringsputen rengjøres eller deler i bevegelse berøres.
	ALLTID bruk apparatet med lokk og lokklås på plass.
	Les og forstå brukerhåndboken.
	ALDRI senk strømledningen, strømpluggen eller motorbasen i vann eller annen væske.
	Delene blir varme ved langvarig bruk. ALDRI berør motorbasedrevets drivholder eller drivsplinten på knivholderen.
	På/av
	Start/stopp
	Puls
PROGRAMSYMBOLER (TILSVARER VITAMIX-OPPSKRIFTER)	
	Smoothier
	Frosne desserter
	Varm suppe
NOTE: Bare på Explorian 750-modellen	
	Dipp og smørepålegg
	Selvrensende



SPESIFIKASJONER

Spenning:	220-240 V
Frekvens:	50-60 Hz
Effekt (maks):	1100-1300 watt
Høyde:	med 1,4 l / beholder på motorbase ELLER med 2,0 l / beholder på motorbase: 44,5 cm
Dybde:	22,9 cm
Bredde:	20,3 cm

Enkelte modeller er ikke tilgjengelige i alle land



vitamix.com

Amerikansk patent: vitamix.com/patents

! ADVARSEL



Les nøye gjennom alle instruksjonene før du tar apparatet i bruk for første gang. Ta vare på disse instruksjonene for fremtidig referanse.



ALLTID bruk jordede stikkontakter.

ALDRI fjern jordingen.

ALDRI bruk en adapter.

BRUK ALDRI skjeteledning.

ALDRI koble apparatet til en timer eller en stikkontakt som kontrolleres av en bryter.



Slå **ALLTID** av OG koble fra app apparatet når det ikke er i bruk og før det monteres, demonteres, flyttes, rengjøres og oppbevares.



ALDRI senk strømledningen, strømpluggen eller motorhuset i vann eller annen væske.

Hvis apparatet blir senket i vann, må apparatets støpsel trekkes ut umiddelbart.

Unnlatelse av å følge instruksjonene kan føre til dødsfall eller elektrisk støt.

Dette produktet er KUN beregnet på bruk i HUSHOLDNINGER, og er ikke ment å brukes til kommersielle formål.

- UNNLATELSE AV Å FØLGE NOEN AV DE VIKTIGE SIKKERHETSILTAKENE OG VIKTIGE INSTRUKSJONENE FOR TRYGG BRUK, ER MISBRUK AV VITAMIX-APPARATET, SOM KAN GJØRE GARANTIE UGYLDIG OG FORÅRSAKE FARE FOR ALVORLIG PERSONSKADE.
- Instruksjonene som står i denne bruks- og vedlikeholdshåndboken, kan ikke dekke enhver tenkelig tilstand og situasjon som kan oppstå. Sunn fornuft og forsiktighet må utøves ved bruk og vedlikehold av et apparat.
- Følg nøye vedlikeholds- og rengjøringsinstruksjonene i denne bruksanvisningen.
- ALDRI bruk apparatet til noe annet enn det det er beregnet til.
- Dette apparatet er ikke ment for bruk av personer (deriblant barn) med reduserte fysiske, sensoriske eller mentale evner, eller mangel på erfaring eller kunnskap, med mindre de har fått veiledning eller instruksjoner om bruk av apparatet av en person som er ansvarlig for deres sikkerhet.
- Barn må overvåkes for å sikre at de ikke leker med blenderen. Oppbevar ledningen utilgjengelig for barn.
- Fjern og kast emballasjemateriale, strømpluggdekslet og etiketter før du bruker apparatet for første gang.
- Koble ALDRI fra apparatet ved å trekke i ledningen. For å trekke ut støpselet, tar du tak i støpselet og trekker det ut av stikkontakten.
- Kom aldri i kontakt med bevegelige deler, spesielt bladene.
- Bruk ALDRI apparatet med løse, knuste eller skadede blandekniver. Kontroller blandeknivene før hver bruk og skift dem ut hvis de er skadet.
- Stram ALDRI hettemutteren på toppen av knivenheten. Skift ut knivenheten umiddelbart hvis den er løs.
- Plasser ALDRI apparatet på eller i nærheten av en varm gass- eller elektrisk brenner, eller der det kan komme i kontakt med andre varmekilder.
- Hvis apparatet ikke fungerer, trekker du ut støpselet og tilbakestiller jordfeilbryteren i husholdningens elektriske system. Hvis jordfeilbryteren fortsetter å løse ut, må du koble apparatet fra stikkontakten og ta kontakt med en kvalifisert elektriker.
- La ALDRI strømledningen henge over kanten av et bord eller en benk, berøre varme overflater eller få knute på seg.
- Forsikre deg ALLTID om at apparatet er fullstendig og riktig montert før bruk, inkludert at strømkabelen er helt viklet ut før bruk.
- Blandebladenheten er veldig skarp. Må håndteres forsiktig og oppbevares utilgjengelig for barn.
- ALDRI bruk annet tilbehør enn det som følger med apparatet eller som tilbys separat av Vitamix. Bruk av tilbehør, inkludert syltetøyglass, som ikke selges eller anbefales av Vitamix, kan forårsake brann, elektrisk støt eller personskade og vil gjøre garantien ugyldig.
- Endringer eller modifiseringer av enhver del av apparatet, inkludert bruk av en del eller deler som ikke er originale autoriserte Vitamix-deler, kan føre til brann, elektrisk støt eller personskade, og vil gjøre garantien ugyldig.
- Forsikre deg ALLTID om at apparatet er koblet fra stikkontakten før du rengjør motorbasen eller sentreringsputen eller berører deler i bevegelse.
- ALDRI fyll beholderen over linjen merket «MAKSIMAL KAPASITET» for å unngå fare for personskade forårsaket av skade på lokket og beholderen.
- Vær forsiktig når du blander varme væsker og ingredienser i beholderen. Sprut eller damp kan føre til brannskader. Aldri fyll beholderen over linjen merket «MAKSIMAL KAPASITET».
- Start ALLTID blandingen på den laveste hastighetsinnstillingen, variabel hastighet 1. Hold hendene og andre kroppsdeler med bar hud unna lokkets åpning for å forhindre fare for brannskader.
- Ekstrem forsiktighet må utvises når du flytter et apparat eller en beholder fylt med varm olje eller andre varme væsker. Spray eller damp som slipper ut, kan forårsake brannskader.

VIKTIGE SIKKERHETSANVISNINGER

24. Berør ALDRI overflater som kan være varme.
25. Fjern ALDRI ingredienser fra apparatet mens det er i bruk. Forsikre deg om at motoren har stoppet helt og at beholderen er fjernet fra motorbasen før du fjerner ingredienser.
26. Hvis det setter seg fast mat rundt blenderkniven, fjerner du beholderen fra motorbasen og bruker en slikkepott til å løsne maten. ALDRI bruk fingrene, siden knivbladet er skarpt.
27. Hold hender, hår, klær og redskaper unna alle bevegelige deler under bruk for å redusere risikoen for alvorlig personskade og/eller skade på apparatet. En slikkepott kan brukes, men bare når beholderen er fjernet fra motorbasen.
28. Hvis blandefunksjonen ikke fungerer når du blander tørre, tykke eller tunge blandinger, må du stoppe bruken og løsne maten med en slikkepott. ALDRI bruk fingrene, siden knivbladet er skarpt. La motoren avkjøles i 1 minutt før du slår på apparatet igjen.
29. Knivbladet må ALDRI ligge i vann.
30. ALDRI bruk utstyret utendørs eller på kjøretøy eller båter i bevegelse.
31. Forlat ALDRI arbeidsområdet når apparatet er i bruk.
32. La ALDRI fremmedlegemer, for eksempel skjeeer, gafler, kniver eller lokklåsen ligge i koppen, da dette vil skade knivene og andre komponenter når du starter apparatet og kan forårsake personskade.
33. Hvis lyden fra apparatet endres under bruk, eller hvis en hard eller fremmed gjenstand kommer i kontakt med bladene, må du ALDRI servere maten som lages med apparatet.
34. ALDRI utsett beholderen for temperaturer eller ingredienser over 99 °C (210 °F).
35. ALLTID bruk apparatet med lokket og lokklåsen fast på plass når maskinen er i drift. ALDRI fjern lokket med 2 deler mens knivene roterer. Lokklåsen skal bare fjernes hvis du skal tilsette ingredienser eller bruker blandestaven.
36. ALDRI fjern lokket mens knivene roterer. Lokklåsen skal bare fjernes hvis du skal tilsette ingredienser og bruke stapperen. Hvis lokket fjernes under bruk, stopper motorbasen. Den starter ikke før lokket og lokklåsen er på plass på beholderen igjen.
37. ALDRI bruk apparatet uten at sentreringsputen er riktig montert under beholderen.
38. Forsikre deg om at beholderen er på nivå med sentreringsputen for å sikre at drivsplinten er koblet til drivholderen før drift.
39. For å redusere faren for personskader, må du ALDRI plassee en knivenhet på motorbasen med mindre den er montert i Vitamix-beholderen.
40. Forsøk ALDRI å sette en beholder på en motorbase i drift eller å bruke en motorbase uten at beholderen er ordentlig på plass.
41. Når du lager nøttesmør eller oljebaserte matvarer, må du ikke blande dem i mer enn ett minutt etter at blandingen begynner å rotere i beholderen. Blanding i lengre perioder kan føre til overoppheting.
42. Apparatet vil nullstille seg selv i tilfelle strømtopp. Dette er en designfunksjon for å unngå farer, hvis den brukes som tiltenkt. Timeren er kun for brukerens referanse og anses ikke som en viktig funksjon for apparatets drift.
43. Kontroller regelmessig om strømledningen, støpselet og apparatet er skadet. ALDRI bruk apparatet hvis det er skadet på noen måte eller hvis det har oppstått en funksjonsfeil. Slutt å bruke apparatet umiddelbart og gå til www.vitamix.com eller ring Vitamix' tekniske støtte for husholdningsapparater på 1.800.484.2649 eller 1.440.235.4840, eller send en e-post til service@vitamix.com umiddelbart for undersøkelse, reparasjon, utskifting eller justering. Hvis apparatet er kjøpt utenfor USA eller Canada, tar du kontakt med din lokale Vitamix-forhandler.
44. Alle reparasjoner, all service og alle utskiftninger av deler skal utføres av Vitamix eller en servicerepresentant som er autorisert av Vitamix.
45. **LAGRE DISSE INSTRUKSJONENE.**

Beholder, lokk, lokklås og stapper

MERK: Eldre beholdere kan brukes på motorbasen i Explorian-serien.

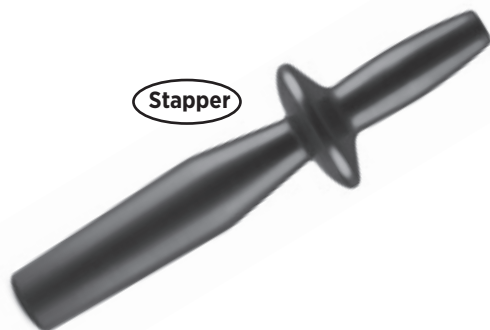
- Programmer er, hvis de er inkludert, optimert spesifikt for beholderen som fulgte med det opprinnelige kjøpet.
- Lokket må ALLTID være på når apparatet og brukes, og lokklåsen må BARE fjernes for å bruke blandestaven eller tilføye ingredienser.
- ALDRI bruk blandestaven i mer enn 30 sekunder i strekk for å unngå overoppheting.
- ALDRI bruk apparatet uten å forsikre deg om at lokket er trygt låst på plass.
- Lokklåsen er merket slik at den kan brukes som målebeger også.
- Sett lokklåsen gjennom åpningen i lokket. Lås fast pluggen ved å vri den med klokken. Vri pluggen mot klokken og løft den ut for å fjerne den.
- Lokk og blandestaver kan IKKE byttes om mellom ulike beholderstiler, -typer og -størrelser. **Bruk bare blandestaven og lokket som følger med apparatet ditt. Hvis du ikke har riktig blandestav for beholderen din, må du ta kontakt med Vitamix' tekniske støtte for husholdningsapparater på 1.800.848.2649 (internasjonalt: 1.440.235.4840).**
- Beholderen må ikke være mer enn 2/3 full når blandestaven brukes.
- FYLL ALLTID beholderen i henhold til anvisningene i Vitamix-oppskriften eller illustrasjonen Rekkefølge for tilsetning av ingredienser på side 106.

Motorbase

- Motoren er konstruert for å beskytte seg mot overoppheting.
- Hvis apparatet ikke starter umiddelbart, må du kontrollere at apparatet er koblet til og at på/av-bryteren er PÅ.
- Hvis motoren er overopphetet, må du la motoren avkjøles i 20–45 minutter.



Explorian 750 vist med 2,0 l beholder. Beholderen, blandestaven og lokket kan variere avhengig av modell.





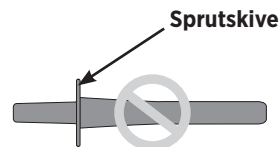
FORSIKTIG

Roterene kniver kan forårsake skade. Lokk og blandestav kan **IKKE** brukes om hverandre med ulike beholderstiler, -typer og -størrelser. Bruk blandestaven som følger med apparatet ditt.

Hvordan bestemme hvilken stapper som skal brukes med beholderen din

Før du bruker en blandestaven under blanding, må du kontrollere at du har riktig blandestav. Bruk blandestaven bare med lokket godt på plass og lokklåsen fjernet. **Hvis en blandestav ble levert sammen med apparatet under kjøp, er dette riktig blandestav å bruke.** Hvis det ikke fulgte med noen blandestav, eller hvis du vil finne ut om en blandestaven du allerede har, kan brukes med den nye beholderen, kan du bruke disse trinnene og følge illustrasjonene for å finne ut hvilken blandestav du skal bruke:

1. Sett lokket på en tom beholder.
2. Fjern lokkpluggen og sett inn stapperen gjennom åpningen i lokkpluggen. Stapperen skal passe lett inn i åpningen. Den skal **IKKE** komme i kontakt med knivene uansett hvor du flytter stapperen inne i beholderen.
3. Visuell kontroll: **HVIS BLANDESTAVEN BERØRER KNIVENE I EN SOM HELST VINKEL, MÅ DU ALDRI BRUKE BLANDESTAVEN MED BEHOLDEREN.**
4. Hvis du ikke har riktig blandestav til beholderen din, kan du ta kontakt med Vitamix' kundestøtte for husholdningsapparater på 1.800.848.2649 eller 1.440.235.4840.



En trinnløs stapper **MÅ IKKE** brukes til noen Vitamix-beholder.

HVORDAN BRUKE STAPPEREN:

VIKTIG! Sprutskiven (ved toppen av blandestaven) og lokket forhindrer at blandestaven treffer knivene når lokket er godt festet i låst posisjon.

- Beholderen må ikke være mer enn to tredjedels full når stapperen brukes under blanding.
- **IKKE** bruk blandestaven i mer enn 30 påfølgende sekunder for å unngå overoppheting under blanding.
- Hvis maten ikke sirkulerer, kan en luftboble sitte fast i apparatet. Ta forsiktig av lokklåsen, og sjekk samtidig at lokket holdes godt på plass. Slipp ut luftboblen ved å sette blandestaven inn gjennom åpningen i lokklåsen.
- Når blandestaven holdes rett ned, vil det kanskje ikke bidra til at ingrediensene sirkulerer. Rett blandestaven mot sidene eller hjørnene av beholderen om nødvendig. **IKKE** prøv å tvinge blandestaven dypere ned i beholderen.

BEHOLDERTYPER

1,4 L

LAV PROFIL
2,0 L

KLASSISK
2,0 L

0,9 L


Bruker en 9-3/4-tommers blandestav.

Har et svart lokk og bruker en 11-tommers blandestav.


Bruker en blandestav på 12-1/2 tommer.

Bruker en 9-3/4-tommers blandestav.






Av/på-bryter  – styrer strømmen til maskinen og er plassert på forsiden av motorbasen.

Kontrollpanel – omfatter puls, variabel hastighetsskive, start-/stoppbryter og selvrengjøringsfunksjoner (kun modellen Explorian 750).


Puls  – roterer bladet med hastigheten på den variable hastighetsskiven når den trykkes inn og er plassert på venstre side av kontrollpanelet.


Variabel hastighetsskive – muliggjør manuell hastighetskontroll fra variabel 1 (tregest) til 10 (høyest).


Standby  – setter apparatet på pause og gjør den klar til å starte den neste oppskriften.

Program – driver apparatet til forhåndsinnstilte tider og stanser automatisk på slutten av programmet. Når start-/stopp-bryteren  trykkes midt i et program, stanser maskinen og programtiden tilbakestilles. Hvis skiven vrir til Standby  midt i et program, vil den ikke gå tilbake til midten av et program det brukte. Det neste ønskede programmet må velges. Programikonene vises i Vitamix-oppskrifter.

-  Smoothier
-  Frosne desserter
-  Varm suppe
- Kun Explorian 750:  Dipper og smørepålegg

Selvrengjørende  – (kun for Explorian 750) Kjører rengjøringssyklusen etter at vann og oppvaskmiddel er tilsatt i maskinen og lokket og lokklåsen er på plass.

Start-/stopp-bryter  – stopper eller starter blandingen når som helst, og er plassert på høyre side av kontrollpanelet.

Når start-/stopp-bryteren  trykkes midt i et program, stopper maskinen og programtiden tilbakestilles til begynnelsen av kjøretiden.



EXPLORIAN 750





ADVARSEL



For å unngå skader. **BERØR ALDRI BEVEGELIGE DELER.**



Hold hender og redskaper utenfor beholderen mens apparatet er i bruk. ALDRI stikk fingre eller redskaper rundt knivene mens knivene roterer.



Knivene fortsetter å rotere til de stopper helt når blandingssyklusen er ferdig.



ALDRI fyll beholderen over linjen merket «MAKSIMAL KAPASITET» for å unngå fare for personskade forårsaket av skade på lokket og beholderen.

Forsøk ALDRI å sette en beholder på en motorbase i drift eller å bruke en motorbase uten at beholderen er ordentlig på plass.

For å unngå mulige brannskader, ALDRI start med høyere hastigheter enn variabel hastighet 1 når du blander varm væske i en stor beholder. Utstrømmende damp, sprut eller innhold kan forårsake forbrenninger. ALLTID bruk apparatet med lokket og lokklåsen på plass, og start med variabel hastighet 1, og øk deretter sakte til 10.

Deler vil bli varme ved langvarig bruk. ALDRI berør motorbasens drivsplint eller drivholderen i knivbasen.

TIPS FOR Å FORHINDRE OVEROPPHETING

- Bare behandle Vitamix-oppskrifter når du lærer å bruke apparatet.
- ALDRI kjør oppskriftene lenger enn det som anbefales. Over- bearbejdede blandinger kan også føre til feil tekstur i oppskriften.
- ALDRI kjør ved høyere eller lavere hastigheter enn det som anbefales.
- Bruk blandestaven til å blande tykkere blandinger og bevege ingrediensene rundt og gjennom knivene.

BLANDING I BEHOLDEREN

1. Sørg ALLTID for at dreieskiven for variabel hastighet står i Standby-☺ posisjon.
2. Trykk på/av-bryteren (se side 106 for plassering) i PÅ (I)-posisjon.
3. Fyll beholderen i henhold til Vitamix' oppskriftsveiledning eller illustrasjonen for rekkefølge for tilsetning av ingredienser (se side 106).

VIKTIG! ALLTID bruk apparatet med lokket og lokklåsen fast på plass når maskinen er i drift. ALDRI fjern lokket mens knivene roterer. Lokklåsen skal bare fjernes hvis du skal tilsette ingredienser eller bruke blandestaven. Hvis lokket fjernes under bruk, stopper motorbasen. Den starter ikke før lokket og lokklåsen er satt på plass på beholderen igjen.

4. Sett lokket på beholderen:
 - Trykk ned lokket til de to tappene klikker på kanten på beholderen.
 - Sett inn lokklåsen og vri den med klokken for å låse den fast i lokket.
5. Plasser beholderen på motorbasen. (Apparatet vil ikke fungere uten en beholder med festet lokk).
6. **BRUK AV VARIABEL HASTIGHET:**
 - a. Vri den variable hastighetsskiven med klokken til variabel hastighet 1.
 - b. Trykk på start/stopp-bryteren.
 - c. Vri dreiebryteren mellom variabel hastighet 1 og 10 under blandesyklusen for å øke eller redusere knivenes hastighet.
 - d. Når blandingen er ferdig, vrir du den variable hastighetsskiven mot klokken til Standby ☺ eller trykker på start-/stopp-bryteren ▷|□ for å stoppe apparatet.

SLIK BRUKER DU PROGRAMMER:

- a. Vri den variable hastighetsskiven mot klokken til ønsket program.
 - b. Trykk på start-/stopp-bryteren for å starte programmet. Apparatet stopper automatisk på slutten av programmet, eller trykk på start-/stopp-bryteren når som helst for å stoppe programmet.
7. Hvis blandingen slutter å sirkulere:
 - a. Fjern lokklåsen, stikk stapperen gjennom åpningen i lokklåsen og rør til blandingen «raper».
 - b. Hvis dette ikke fungerer, trykker du på på/av-bryteren for å stanse motoren.
 - c. Fjern beholderen fra motorbasen, ta av lokket og bruk en gummislikkepott til å presse luftboblen bort fra bladene.
 - d. Tilsett væske ved behov.
 - e. Sett på lokket og lokklåsen igjen.
 - f. Sett beholderen på plass på motorbasen og fortsett blandesyklusen.
 8. Etter blanding, vent til knivene stopper helt før du fjerner lokket eller fjerner beholderen fra motorbasen.
 9. Bruk en Vitamix Under Blade Scraper eller slikkepott til å fjerne saus, gelé, syltetøy, peanøttsmør og andre ingredienser fra beholderen.

**ADVARSEL****For å unngå personskader og skader**

Slå av og koble fra apparatet før rengjøring for å unngå utilsikket aktivering.



Stram ALDRI hettemutteren (på toppen av knivenheten). Skift ut knivenheten umiddelbart hvis den er løs.

Fare for elektrisk støt

ALLTID koble fra motorbasen før rengjøring eller når den ikke brukes.



ALDRI plasser motorbasen i vann eller annen væske.

Hvis instruksjonene ikke følges, kan dette føre til død eller elektrisk støt.

FØR FØRSTEGANGS BRUK

Beholderen er konstruert slik at den kan rengjøres helt uten å fjerne holdemutteren og knivenheten. Rengjørings- og desinfeksjonsprosedyrene eller en rengjøringsssyklus i oppvaskmaskin sikrer en fullstendig og grundig rengjøring av beholderen og komponentene.

- ALDRI forsøk å fjerne holdermutteren eller knivenheten fra beholderen.
 - Hvis beholderen er skadet, **MÅ DU IKKE BRUKE DEN**. Kontakt Vitamix' tekniske støtte for husholdningsapparater **UMIDDELBART** for å få hjelp.
1. Tørk av motorbasen med en varm, fuktig klut og deretter med en tørr, myk klut.
 2. Vask beholderen, kopper, lokk, lokklås og blandestav med varmt såpevann. Skyll alle delene og tørk dem med en tørr og myk klut.
 3. Sett apparatet på en jevn, tørr og ren kjøkkenbenk.
 4. Koble apparatet til en jordet stikkontakt med tre pinner.

RENGJØRING AV MOTORBASEN

1. Slå av og koble fra apparatet og fjern beholderen fra motorbasen.
2. Vask den utvendige overflaten med en fuktig og myk klut eller svamp som er skyllet i en mild løsning av flytende oppvaskmiddel og varmt vann. **MERK:** Senk ALDRI strømløsningen, støpselet eller motorhuset ned i vann eller annen væske.
3. Sentreringsputen kan fjernes for grundigere rengjøring, og kan vaskes i oppvaskmaskin eller for hånd med varmt såpevann.
4. Tørk av alle overflater umiddelbart med en myk klut.

RENGJØRING AV BLANDESTAVEN

Blandestaven kan vaskes oppvaskmaskin eller for hånd med varmt såpevann. Skyll rent under rennende vann og la den så tørke.

RENGJØRING AV BEHOLDEREN - OPPVASKMASKIN

Beholderen, lokket, knivbasen og tetningen kan vaskes i oppvaskmaskin eller for hånd, og desinfiseres med følgende prosedyrer.

RENGJØRING AV BEHOLDEREN - SELVRENGJØRING (KUN EXPLORIAN 750)

1. Fyll beholderen halvfull med varmt vann og tilsett et par dråper oppvaskmiddel.
2. Klikk eller skyv det komplette lokket i to deler inn i låst posisjon.
3. Vri den variable hastighetsskiven til ikonet for selvrensjøring.
4. Programmet stopper automatisk når det er fullført.
5. Skyll alle delene og la vannet renne av dem.

RENGJØRING AV BEHOLDEREN - VARIABEL HASTIGHET

1. Fyll beholderen halvfull med varmt vann og tilsett et par dråper oppvaskmiddel.
2. Klikk eller skyv det komplette lokket i to deler inn i låst posisjon.
3. Trykk på start-/stopp-bryteren for å slå på apparatet, og øk sakte til variabel hastighet 10.
4. Kjør apparatet i 30 til 60 sekunder.
5. Vri dreiebryteren for variabel hastighet tilbake til variabel hastighet 1 og trykk på start-/stopp-bryteren for å slå av apparatet.
6. Skyll alle delene og la vannet renne av dem.

RENGJØRING AV BEHOLDEREN - BLEKEMIDDEL

1. Utfør først instruksjonene for «Rengjøring av beholderen».
2. Gjenta deretter instruksjonene «Rengjøring av beholderen», men tilsett 7,4 ml (1,5 teskjeer) flytende blekemiddel i 473 ml vann.
3. La blandingen stå i beholderen i ytterligere 1 1/2 minutt.
4. Hell ut blekemiddelblandingen. La beholderen lufttørke. **IKKE** skyll etter desinfisering. Skyll umiddelbart før neste bruk hvis dette ønskes.

DESINFEKSJON AV BEHOLDEREN - EDDIK

1. Utfør først instruksjonene for «Rengjøring av beholderen».
2. Gjenta deretter instruksjonene for «Rengjøring av beholderen», men bruk 473 ml eddik for hver 473 ml vann.
3. La blandingen stå i beholderen i ytterligere tre hele minutter. Den totale kontakttiden til eddikløsningen i beholderen skal være fem minutter.
4. Hell eddikløsningen ut av beholderen over den innvendige overflaten på lokket i to deler.
5. Gjenta desinfiseringsprosedyren én gang til (trinn 2 til 4).
6. La beholderen og lokket lufttørke. **IKKE** skyll etter desinfisering. Skyll om ønskelig umiddelbart før neste bruk.

5 års heldekkende maskingaranti

VIKTIG BEGRENSNING: VITAMIX KAN BEGRENSE GARANTITJENESTE FOR VÅRE PRODUKTER TIL LANDET DER VITAMIX ELLER DERES AUTORISERTE DISTRIBUTØRER ORIGINAL SELGTE PRODUKTET.

- Vitamix anbefaler ikke bruk av våre produkter utenfor landet der slike produkter ble solgt og bygget for bruk.
- Våre produkter er godkjent og sertifisert i henhold til landsspesifikke sikkerhetsstandarder.
- Hvert land kan kreve en annen spenning og frekvens, strømledning og støpsel for samme produkt.
- Ettersalgsservice er kanskje ikke tilgjengelig utenfor landet der Vitamix eller noen av deres autoriserte distributører opprinnelig solgte et produkt, ettersom våre autoriserte distributører og reparasjonsteknikere lagerfører reparasjonsdeler som kan være landsspesifikke.

1. Produktgaranti.

For å bekrefte garantien, kontakt den autoriserte Vitamix husholdningsdistributøren/tjenesteleverandøren i ditt land ved å besøke https://www.vitamix.com/vr/en_us/international-support.

2. Hvem kan søke garantidekning.

Denne garantien gis av Vitamix til eieren av dette apparatet, og gjelder kun for personlig bruk i en husholdning. Garantien gjelder ikke for produkter som brukes kommersielt, leies ut eller videreselges. Skulle eierskapet til Vitamix endres i løpet av garantiperioden, må du gi den nye eieren en kopi av den originale kvitteringen for å kunne bekrefte garantiens startdato.

3. Hva blir dekket.

Vitamix garanterer overfor eieren at hvis dette apparatet (et «apparat» består av en motorbase, beholder(e), lokk og stapper(e) som kjøpes sammen) svikter innen 5 år fra det tidligste av kjøpsdatoen eller leveringsdatoen som tillatt ved lov på grunn av en mangel ved materialet eller konstruksjonen eller som et resultat av normal slitasje fra vanlig husholdningsbruk. Den autoriserte Vitamix' husholdningsdistributøren/serviceleverandøren vil reparere det defekte apparatet eller apparatets komponent kostnadsfritt innen 30 dager etter mottak av det returnerte apparatet.

Hvis det defekte apparatet eller apparatets komponent etter Vitamix' eget skjønn ikke kan repareres, vil den autoriserte Vitamix-husholdningsdistributøren/serviceleverandøren velge å erstatte apparatet kostnadsfritt med samme modell eller den neste modellen hvis originalmodellen ikke lenger kan kjøpes. I dette tilfellet forblir garantiens startdato den samme som kjøpsdatoen for det originale Vitamix-apparatet.

4. Hva er ikke dekket.

- Denne garantien gjelder ikke for apparater som brukes kommersielt eller til formål utenfor en vanlig husholdning.
- Denne garantien er bare gyldig hvis apparatet brukes og vedlikeholdes i samsvar med instruksjonene, advarslene og forholdsreglene i brukerhåndboken. Denne garantien dekker ikke skader forårsaket av ulykker (f.eks. fremmedlegemer i beholder under blanding, fall av enhet eller beholder osv.).
- Denne garantien dekker ikke skade som følge av bruk av apparatet utenfor landet der det ble solgt og produsert for bruk, og garanti-service kan være begrenset til landet der Vitamix eller deres autoriserte distributører opprinnelig solgte apparatet.
- Denne garantien dekker ikke kosmetiske endringer som ikke påvirker ytelsen, for eksempel misfarging, riper eller slitasje på grunn av bruk av slipemidler eller rengjøringsmidler, eller oppsamling av matrester.

Beholdere: Blanding av enkelte urter og krydder i beholderen/koppen fører til kosmetiske lyter på beholderen/koppen, og kan føre til at knivene raskt blir sløve. Spor av sand og grove, slipende urter fører også til at knivene raskt blir sløve. Urter kan inneholde flyktige oljer som beholderen/koppen tar opp i materialet. Dette kan føre til vedvarende fargeforandring. Beholderen/koppen og knivene dekkes ikke av Vitamix-garantien under disse omstendighetene.

Vitamix tar ikke ansvar for kostnader av eventuelle uautoriserte garantireparasjoner. Din Vitamix kan kun vedlikeholdes eller repareres av en autorisert Vitamix husholdningsdistributør/serviceleverandør.

REPARASJON, UTSKIFTING ELLER REFUSJON AV KJØPESUMMEN ER EKSKLUSIVE RETTSMIDLER FOR KJØPEREN OG DET ENESTE ANSVARET TIL VITAMIX OG DETS AUTORISERTE DISTRIBUTØRER UNDER DENNE GARANTIEN. INGEN ANSATTE ELLER REPRESENTANTER FOR VITAMIX ELLER NOEN AV DETS AUTORISERTE DISTRIBUTØRER ER AUTORISERT TIL Å GI YTTERLIGERE GARANTIER ELLER ENDRINGER I DENNE GARANTIEN SOM KAN VÆRE BINDENDE FOR VITAMIX. TILSVARENDE, KJØPEREN BØR IKKE STOLE PÅ YTTERLIGERE UTTALELSER FRA NOEN ANSATT ELLER REPRESENTANT FOR VITAMIX ELLER NOEN AV DETS AUTORISERTE DISTRIBUTØRER. VITAMIX SKAL IKKE UNDER NOEN OMSTENDIGHETER, DET VÆRE SEG BASERT PÅ KONTRAKT, ANSVARSFRASKRIVELSE, GARANTI, ERSTATNINGSRETTSLIG ANSVAR (INKLUDERT UAKTOMHET), OBJEKTIVT ANSVAR ELLER ANNET, VÆRE ANSVARLIG FOR SPESIELLE, INDIRAKTE, FØLGELIGE ELLER KONSEKVENSIELLE SKADER, INKLUDERT, MEN IKKE BEGRENSET TIL, TAP AV FORTJENESTE ELLER UTBYTTE.

MERK: Hvis Vitamix-maskinen din trenger service, men ikke omfattes av garantien, kan den likevel repareres på din bekostning (reparasjon og frakt). Kontakt den autoriserte Vitamix-distributøren/serviceleverandøren i landet ditt på https://www.vitamix.com/vr/en_us/international-support. Hvis du vil ta kontakt med Vitamix' støtte for husholdningsapparater eller salgsavdelingen, kan du ringe 800.848.2649 eller +1.440.235.4840 (internasjonalt) eller sende en e-post til service@vitamix.com.

5. Hva gjør denne garantien ugyldig.

- Misbruk, feil bruk, uaktsom bruk, endringer på apparatet, eksponering for unormale eller ekstreme forhold eller unnlatelse av å følge bruksanvisningen i denne håndboken ugyldiggjør denne garantien.
- Garantien gjelder heller ikke hvis reparasjoner på apparatet eller en av apparatets komponenter utføres av noen andre enn enten Vitamix eller en autorisert Vitamix-serviceleverandør, eller hvis en komponent av apparatet som er underlagt denne garantien, brukes sammen med en motorbase eller beholder som ikke er godkjent av Vitamix.
- Garantien er ugyldig når apparatet brukes med en transformator eller adapter for å konvertere spenningen.

6. Hvordan få garantiservice.

Kontakt den autoriserte Vitamix husholdningsdistributøren/serviceleverandøren i ditt land for å få hjelp med service på Vitamix. For en liste over Vitamix-distributører, se https://www.vitamix.com/vr/en_us/international-support.

7 års heldekkende maskingaranti

VIKTIG BEGRENSNING: VITAMIX KAN BEGRENSE GARANTITJENESTE FOR VÅRE PRODUKTER TIL LANDET DER VITAMIX ELLER DERES AUTORISERTE DISTRIBUTØRER ORIGINAL SELGTE PRODUKTET.

- Vitamix anbefaler ikke bruk av våre produkter utenfor landet der slike produkter ble solgt og bygget for bruk.
- Våre produkter er godkjent og sertifisert i henhold til landsspesifikke sikkerhetsstandarder.
- Hvert land kan kreve en annen spenning og frekvens, strømledning og støpsel for samme produkt.
- Ettersalgsservice er kanskje ikke tilgjengelig utenfor landet der Vitamix eller noen av deres autoriserte distributører opprinnelig solgte et produkt, ettersom våre autoriserte distributører og reparasjonsteknikere lagerfører reparasjonsdeler som kan være landsspesifikke.

1. Produktgaranti.

For å bekrefte garantien, kontakt den autoriserte Vitamix husholdningsdistributøren/tjenesteleverandøren i ditt land ved å besøke https://www.vitamix.com/vr/en_us/international-support.

2. Hvem kan søke garantidekning.

Denne garantien gis av Vitamix til eieren av dette apparatet, og gjelder kun for personlig bruk i en husholdning. Garantien gjelder ikke for produkter som brukes kommersielt, leies ut eller videreselges. Skulle eierskapet til Vitamix endres i løpet av garantiperioden, må du gi den nye eieren en kopi av den originale kvitteringen for å kunne bekrefte garantiens startdato.

3. Hva blir dekket.

Vitamix garanterer overfor eieren at hvis dette apparatet (et «apparat» består av en motorbase, beholder(e), lokk og stapper(e) som kjøpes sammen) svikter innen 5 år fra det tidligste av kjøpsdatoen eller leveringsdatoen som tillatt ved lov på grunn av en mangel ved materialet eller konstruksjonen eller som et resultat av normal slitasje fra vanlig husholdningsbruk. Den autoriserte Vitamix' husholdningsdistributøren/serviceleverandøren vil reparere det defekte apparatet eller apparatets komponent kostnadsfritt innen 30 dager etter mottak av det returnerte apparatet.

Hvis det defekte apparatet eller apparatets komponent etter Vitamix' eget skjønn ikke kan repareres, vil den autoriserte Vitamix-husholdningsdistributøren/serviceleverandøren velge å erstatte apparatet kostnadsfritt med samme modell eller den neste modellen hvis originalmodellen ikke lenger kan kjøpes. I dette tilfellet forblir garantiens startdato den samme som kjøpsdatoen for det originale Vitamix-apparatet.

4. Hva er ikke dekket.

- Denne garantien gjelder ikke for apparater som brukes kommersielt eller til formål utenfor en vanlig husholdning.
- Denne garantien er bare gyldig hvis apparatet brukes og vedlikeholdes i samsvar med instruksjonene, advarslene og forholdsreglene i brukerhåndboken. Denne garantien dekker ikke skader forårsaket av ulykker (f.eks. fremmedlegemer i beholder under blanding, fall av enhet eller beholder osv.).
- Denne garantien dekker ikke skade som følge av bruk av apparatet utenfor landet der det ble solgt og produsert for bruk, og garanti-service kan være begrenset til landet der Vitamix eller deres autoriserte distributører opprinnelig solgte apparatet.
- Denne garantien dekker ikke kosmetiske endringer som ikke påvirker ytelsen, for eksempel misfarging, riper eller slitasje på grunn av bruk av slipemidler eller rengjøringsmidler, eller oppsamling av matrester.

Beholdere: Blanding av enkelte urter og krydder i beholderen/koppen fører til kosmetiske lyter på beholderen/koppen, og kan føre til at knivene raskt blir sløve. Spor av sand og grove, slipende urter fører også til at knivene raskt blir sløve. Urter kan inneholde flyktige oljer som beholderen/koppen tar opp i materialet. Dette kan føre til vedvarende fargeforandring. Beholderen/koppen og knivene dekkes ikke av Vitamix-garantien under disse omstendighetene.

Vitamix tar ikke ansvar for kostnader av eventuelle uautoriserte garantireparasjoner. Din Vitamix kan kun vedlikeholdes eller repareres av en autorisert Vitamix husholdningsdistributør/serviceleverandør.

REPARASJON, UTSKIFTING ELLER REFUSJON AV KJØPESUMMEN ER EKSKLUSIVE RETTSMIDLER FOR KJØPEREN OG DET ENESTE ANSVARET TIL VITAMIX OG DETS AUTORISERTE DISTRIBUTØRER UNDER DENNE GARANTIE. INGEN ANSATTE ELLER REPRESENTANTER FOR VITAMIX ELLER NOEN AV DETS AUTORISERTE DISTRIBUTØRER ER AUTORISERT TIL Å GI YTTERLIGERE GARANTIER ELLER ENDRINGER I DENNE GARANTIE SOM KAN VÆRE BINDENDE FOR VITAMIX. TILSVARENDE, KJØPEREN BØR IKKE STOLE PÅ YTTERLIGERE UTTALELSER FRA NOEN ANSATT ELLER REPRESENTANT FOR VITAMIX ELLER NOEN AV DETS AUTORISERTE DISTRIBUTØRER. VITAMIX SKAL IKKE UNDER NOEN OMSTENDIGHETER, DET VÆRE SEG BASERT PÅ KONTRAKT, ANSVARSFRASKRIVELSE, GARANTI, ERSTATNINGSPRETSLIG ANSVAR (INKLUDERT UAKTSOMHET), OBJEKTIVT ANSVAR ELLER ANNET, VÆRE ANSVARLIG FOR SPESIELLE, INDIREKTE, FØLGELIGE ELLER KONSEKVENSIELLE SKADER, INKLUDERT, MEN IKKE BEGRENSET TIL, TAP AV FORTJENESTE ELLER UTBYTTE.

MERK: Hvis Vitamix-maskinen din trenger service, men ikke omfattes av garantien, kan den likevel repareres på din bekostning (reparasjon og frakt). Kontakt den autoriserte Vitamix-distributøren/serviceleverandøren i landet ditt på https://www.vitamix.com/vr/en_us/international-support. Hvis du vil ta kontakt med Vitamix' støtte for husholdningsapparater eller salgsavdelingen, kan du ringe 800.848.2649 eller +1.440.235.4840 (internasjonalt) eller sende en e-post til service@vitamix.com.

5. Hva gjør denne garantien ugyldig.

- Misbruk, feil bruk, uaktsom bruk, endringer på apparatet, eksponering for unormale eller ekstreme forhold eller unnlatelse av å følge bruksanvisningen i denne håndboken ugyldiggjør denne garantien.
- Garantien gjelder heller ikke hvis reparasjoner på apparatet eller en av apparatets komponenter utføres av noen andre enn enten Vitamix eller en autorisert Vitamix-serviceleverandør, eller hvis en komponent av apparatet som er underlagt denne garantien, brukes sammen med en motorbase eller beholder som ikke er godkjent av Vitamix.
- Garantien er ugyldig når apparatet brukes med en transformator eller adapter for å konvertere spenningen.

6. Hvordan få garantiservice.

Kontakt den autoriserte Vitamix husholdningsdistributøren/serviceleverandøren i ditt land for å få hjelp med service på Vitamix. For en liste over Vitamix-distributører, se https://www.vitamix.com/vr/en_us/international-support.